



RSD-S-PLC Quick Installation Guide

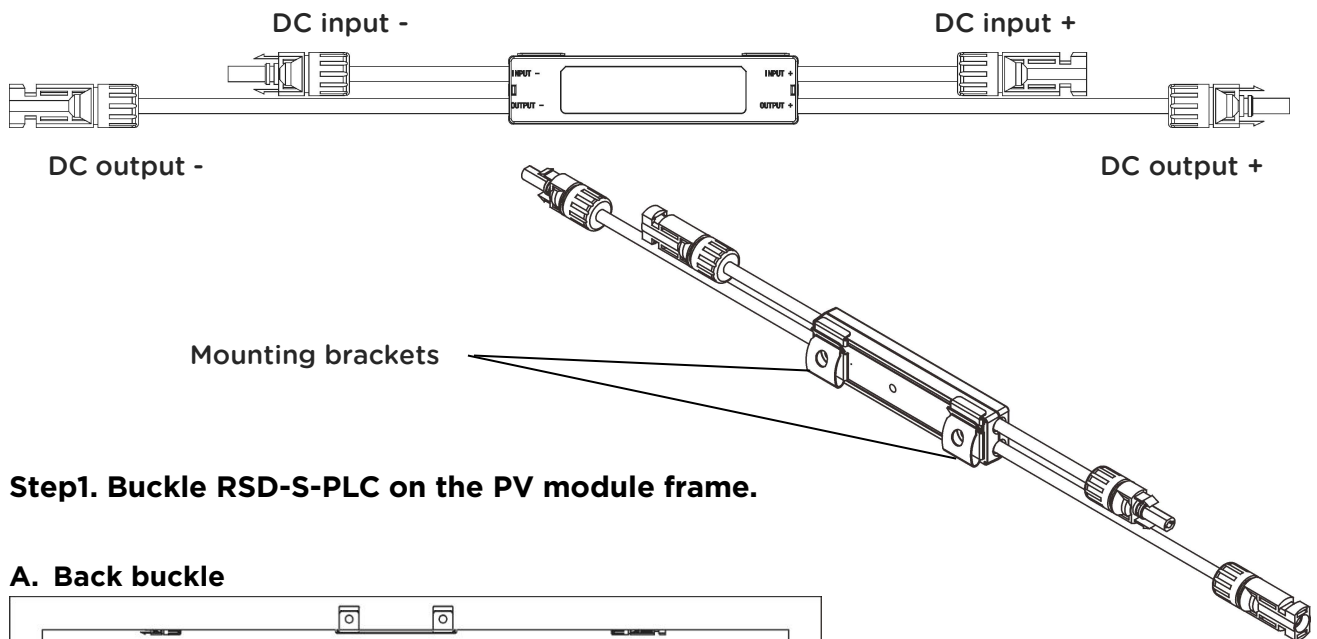


Step1. Buckle RSD-S-PLC on the PV module frame.

A. Back buckle

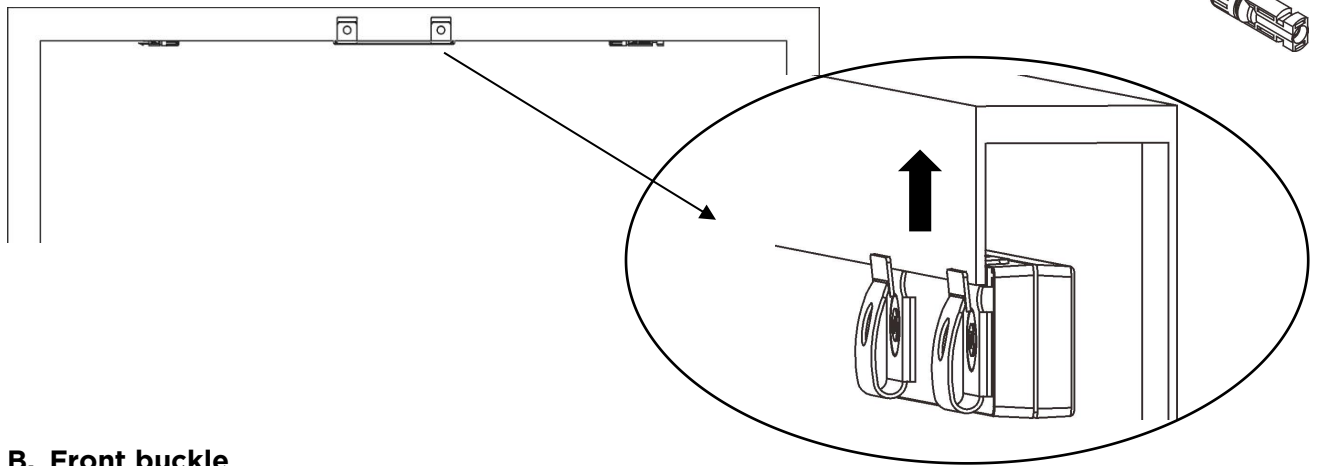

B. Front buckle

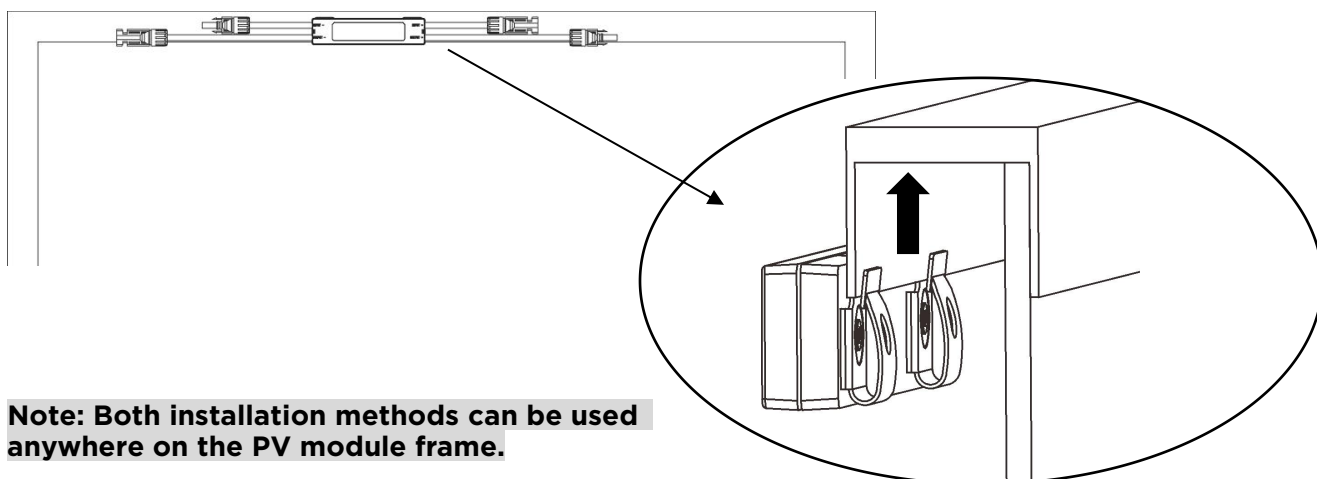

Note: Both installation methods can be used anywhere on the PV module frame.

Step 2. Connect the input port of the RSD-S-PLC to the junction box, then connect the output ports of two adjacent RSD-S-PLCs to the inverter.

