




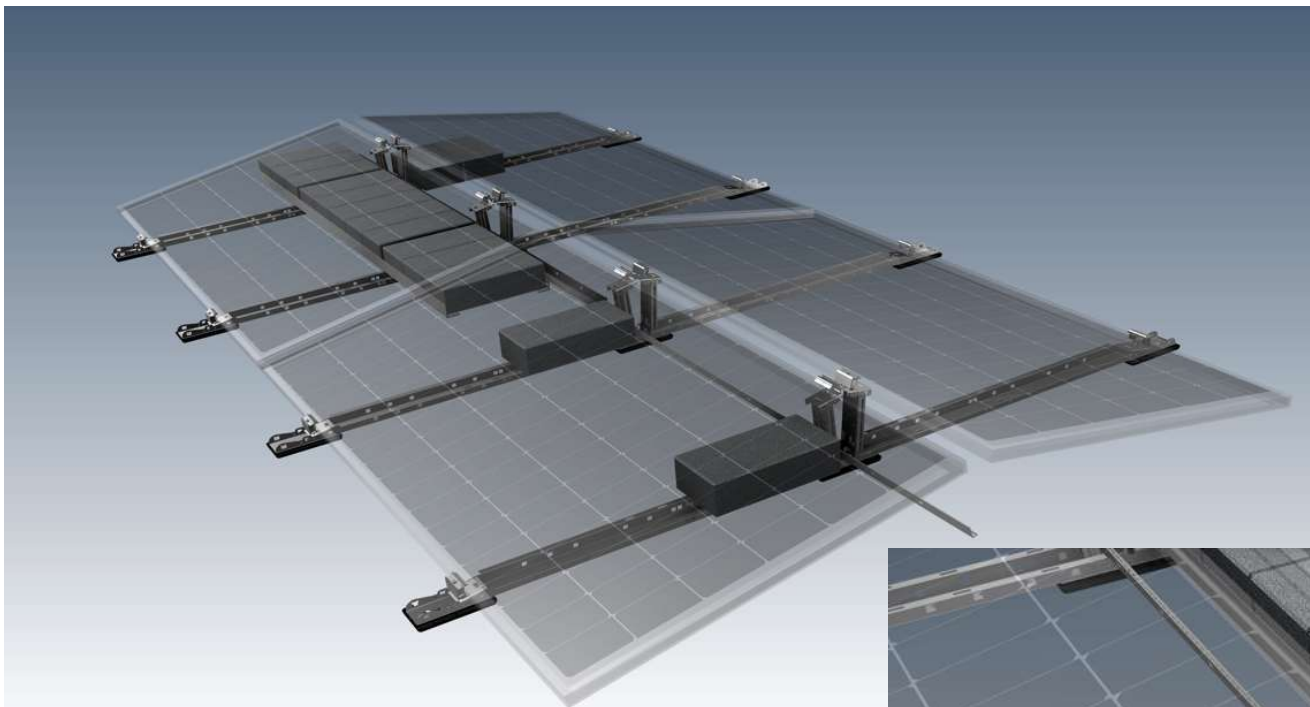

SLRack
Schletter Ludwig

SL FAST FLAT

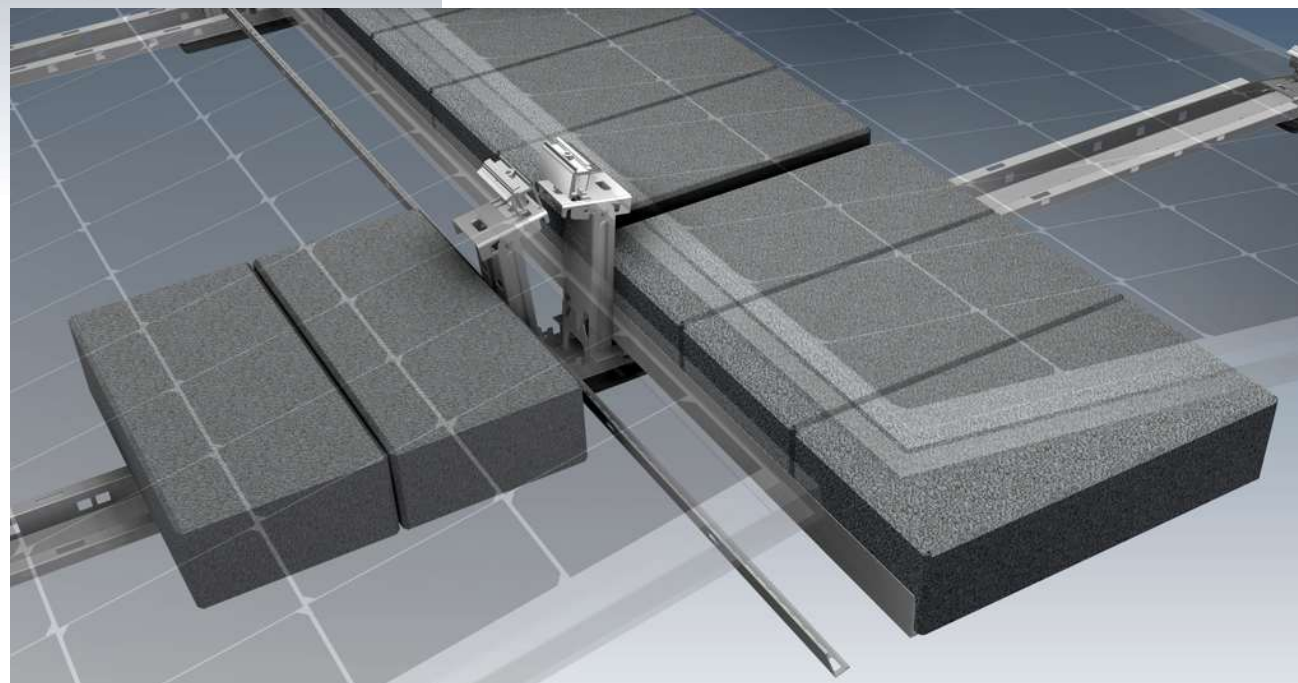


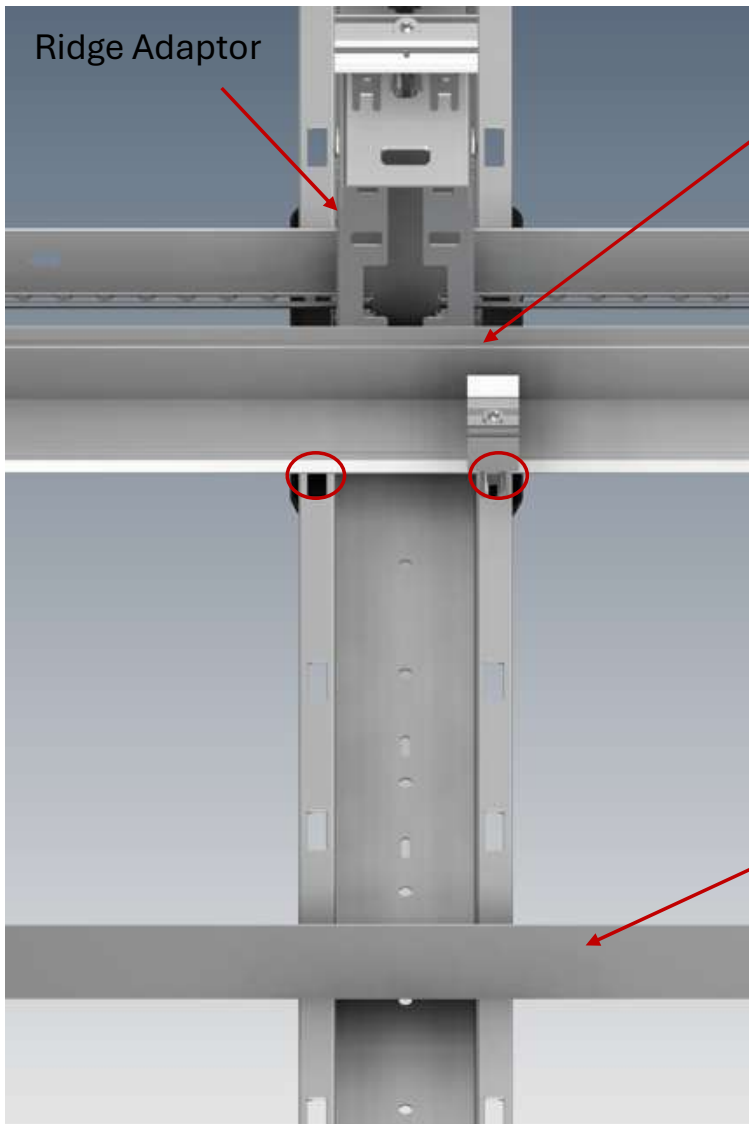


Push first Ballast Bracket directly to the ridge adaptor and fixate with only one Universal Clamp in either one of the slots (red circle), depending on the ballast block width to ensure the max. number of blocks fit onto the 2300 mm long ballast brackets.


Flexible placement of second Ballast Bracket. Location depends on length of ballast block.

Basic Frame

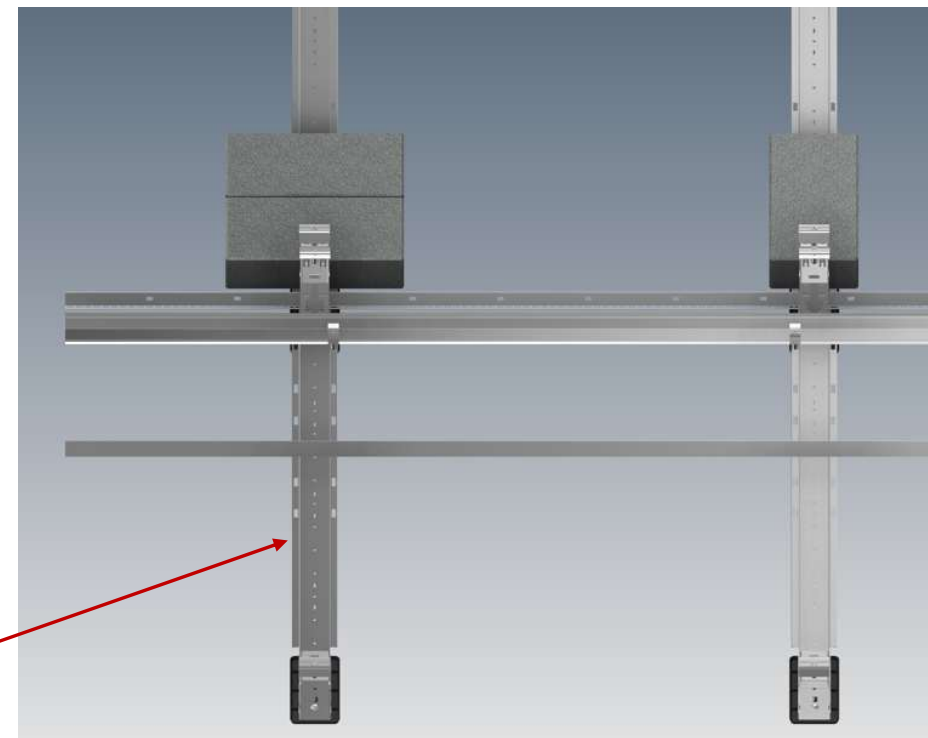




Universal Clamp

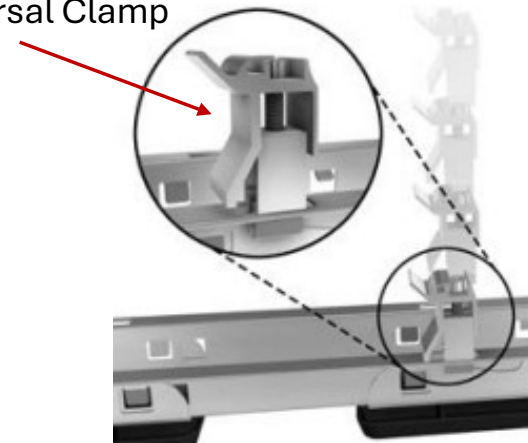

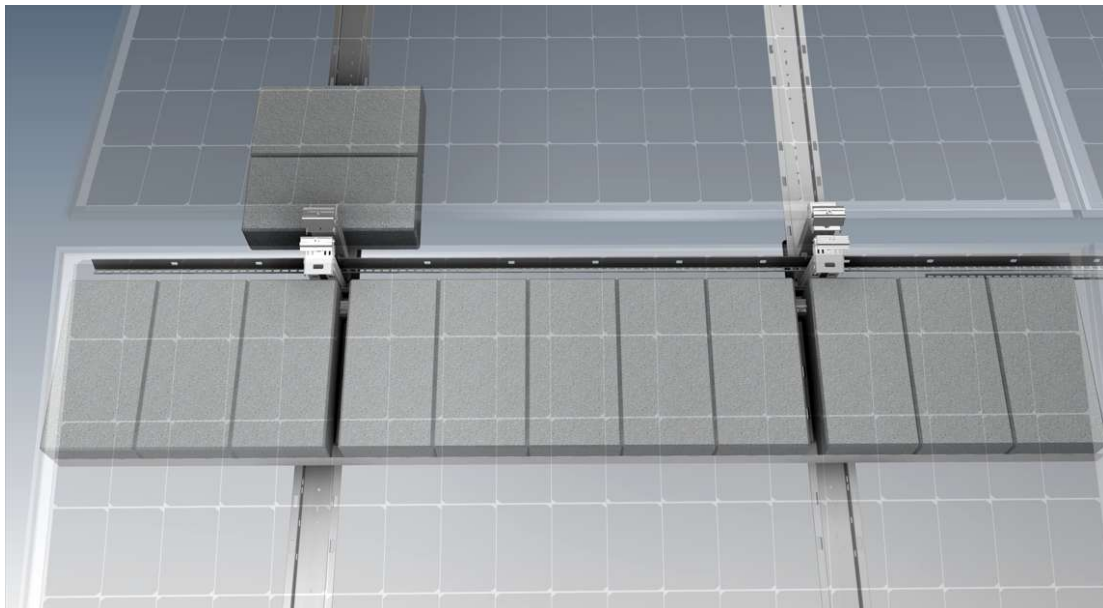

The ballast blocks can be flush with the Ballast Brackets, but no overhang is permitted.

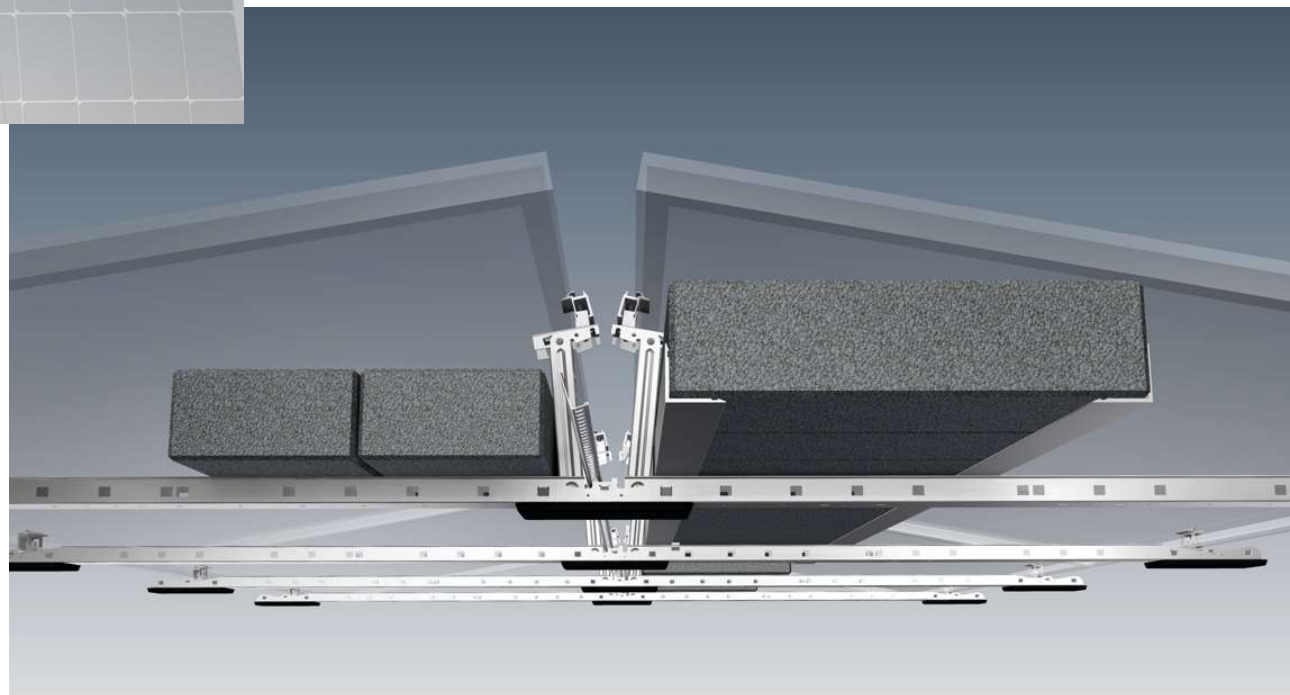

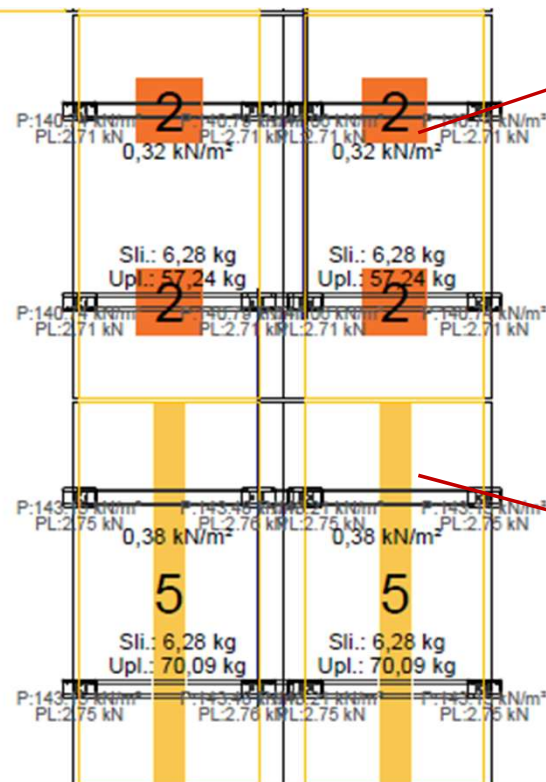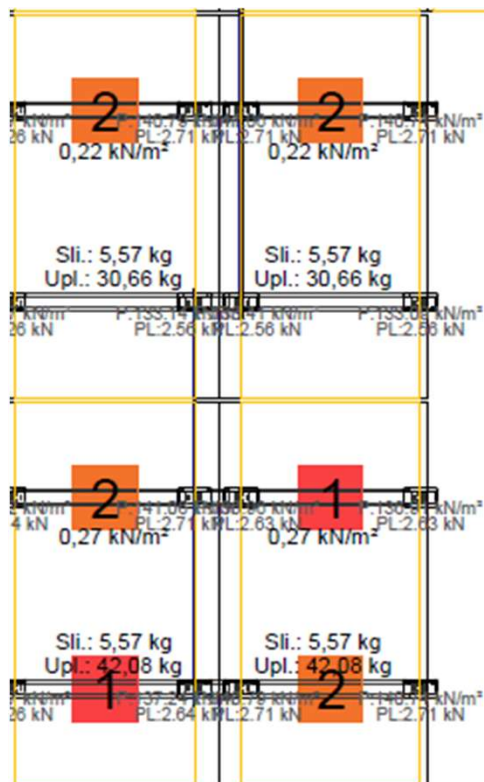

Square: Number of ballast blocks to be placed directly onto the Basic Frame.

In this case:

red = 1 ballast block

orange = 2 ballast blocks

Rectangle: 2 Ballast Brackets, 2 Universal Clamps, number of ballast blocks, in this case 5.